


FAQ

GOHANGAMA -Glass lid rice cooker-

Q. I don't understand how to attach the latch.

A. Follow the assembly steps below.

(1) Set the stopper as shown below.

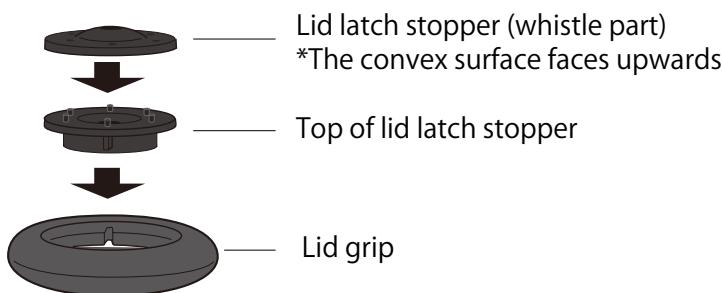


*Be careful not to lose the whistle part.


*The whistle part may not make the whistling sound correctly if water gets inside.



(2) Press the bottom of the stopper against the reverse side of the glass lid,

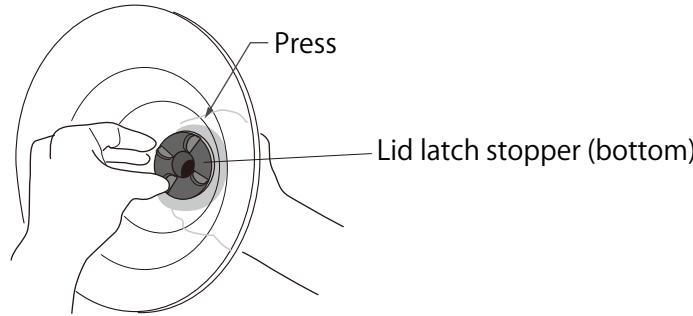

(3) Attach (1) to the front of the glass lid, and rotate the clip clockwise.

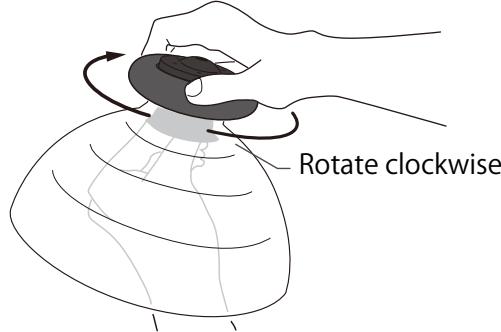

Be sure to close the lid clip tightly for use.

Holding the lid clip when it is loose may cause the product to fall.